



**MICHELIN**



**2X**

**428 MM  
MAX**

**MAXIMUM  
HEIGHT**


**2000 KG  
MAX**

**MAXIMUM  
RATED LOAD**

**2000 KG**  
**RATCHET LOCKING**  
**JACK STANDS**

*USER GUIDE*

**FUNCTIONS**

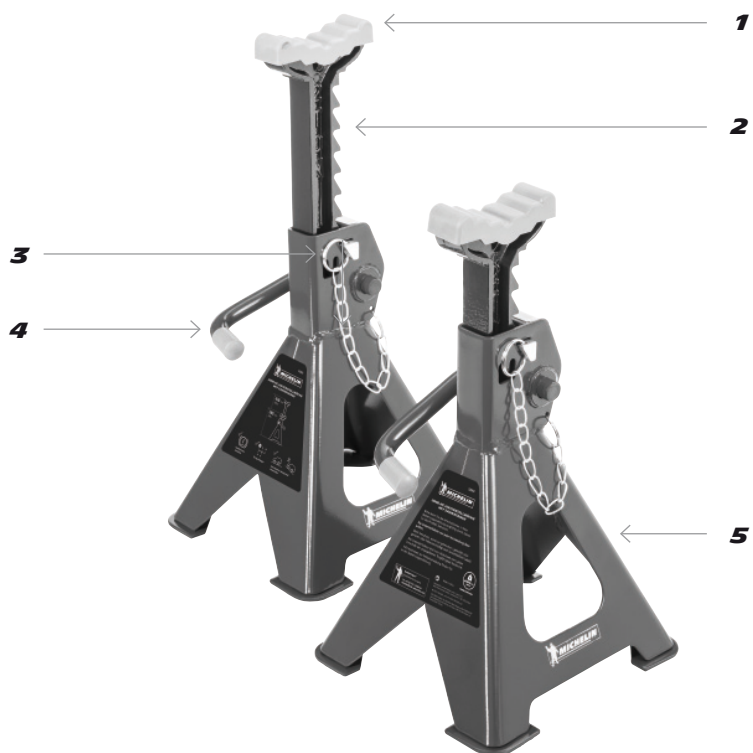

- 1. Soft grip saddle
- 2. Ratchet bar
- 3. Safety pin
- 4. Locking handle
- 5. Frame

# **2000 KG RATCHET LOCKING JACK STANDS**

## **USER GUIDE**

**SAVE THESE INSTRUCTIONS!** For your safety, read, understand, and follow the information provided with and on this jack stand. The owner and operator of this equipment must have an understanding of this jack stand and safe operating procedures before attempting to use. The owner and operator must be aware that use of this product may require special skills and knowledge. Instructions and safety information must be conveyed in the operator's native language before use of this jack stand is authorized. If any doubt exists as to the safe and proper use of this jack stand, remove from service immediately.

**Inspect jack stands before each use.** Do not use if broken, bent, cracked, or damaged parts (including labels) are noted. Any jack stand that appears damaged in any way, operates abnormally or is missing parts, must be removed from service immediately.

If the jack stand has been, or suspected to have been, subjected to a shock load (a load dropped suddenly, unexpectedly upon it), immediately discontinue use and remove from service. **It is recommended that an annual inspection be done by qualified personnel.**

### **PRODUCT DESCRIPTION / SAFETY INSTRUCTIONS**

MICHELIN 2000 kg Ratchet Locking Jack Stands are designed to safely support level, rated capacity loads, specifically vehicles, for extended periods. Stamped steel construction and ductile iron ratchet bars ensure safety, strength and stability.

### **BEFORE USE**

1. Verify that the product and the application are compatible.
2. Before using this product, read the owners manual completely and familiarize yourself thoroughly with the product, its components and recognize the hazards associated with its use.
3. Always check the vehicle owners or service manual for location of proper lift and support points.

### **SPECIFICATIONS**

Maximum rated load:	2,000 kg
Minimum height:	280 mm
Maximum height:	428 mm

***WARNING & SAFETY INFORMATION!***

- Jack stands that are used on a sloping surface can easily slip to the side or kink.
- The strength of the jack stands is greatly reduced if loads are not centred or if sideways forces are applied to them.
- Always ensure that jack stands are in perfect condition (no cracked welds, no loose, missing or damaged components). If it is suspected that they have been subjected to an excessive load or an impact, immediately discontinue use and remove from service.
- It is advisable to inspect jack stands before use to ensure that they have not deteriorated (no corrosion, cracking, or deformation).
- Use only as specified by the manufacturer.
- Use no more than a single pair of stands.
- Use the jack stands only on a hard level surface.
- Securely chock the wheels that are still in contact with the ground.
- Make sure that each stand is securely located under a strong point of the vehicle. Consult the vehicle manufacturer's handbook for guidance.
- Exercise extra care when using a three wheeled vehicle or trailer.
- Upper and lower part of the jack stands must not be separated.
- **DO NOT EXCEED MAXIMUM LOAD.**
- Never use on sloping, inclined, uneven ground or on a soft surface.
- When supporting a vehicle, place jack stands only at support points specified by the vehicle manufacturer.
- Ensure that the load and the jack stands are stable before working under the vehicle.
- Centre the load on the saddle of the jack stand.
- Never use an additional support.
- Do not modify the jack stands in any way.


The manufacturer accepts no liability for any injury or damage resulting from a failure to comply with these warnings.

## **INSTRUCTIONS FOR USE**

1. For correct stability choose a hard and flat surface.
2. Engage the hand brake and put the vehicle into gear.
3. Adjust the ratchet bar to the desired height and lock it with the locking handle.
4. Secure the jack stand with the safety pin.
5. Jack up your vehicle as specified by the manufacturer.
6. Centre the load over the saddle of the jack stand. It is advisable to leave the jack in place when the weight of the vehicle is supported by the jack stand.
7. To remove the jack stand, jack the vehicle up again, pull the jack stand free, then lower the vehicle to the ground.
8. Protect the jack stands from corrosion by cleaning them, then wipe over with an oily rag before storage.




**Handbrake on**

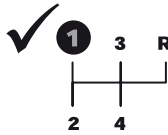

**Leave car in gear**



**Use on a flat surface**

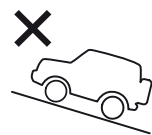

**Customer enquiries:**

We're at your service. Let us help you find a better way forward.

**Tel: +49 (0) 7131 27588-44**  
**Michelin@helix-automotive.com**

Manufactured and distributed under licence by Helix Automotive GmbH, Fischeracker 4, DE-74223 Flein

© 2021 Michelin, [www.michelin-lifestyle.com](http://www.michelin-lifestyle.com)

MICHELIN and/or the Michelin Man Device and/or BIBENDUM are trademark(s) owned by, and used with the permission of, the Michelin Group.

