



MICHELIN



VISIBILITY



6 LIGHT PATTERNS



RUN TIME

HIGH VISIBILITY LED
ROAD FLARE
USER GUIDE

HIGH VISIBILITY LED ROAD FLARE

USER GUIDE

Thank you for purchasing the MICHELIN High Visibility LED Road Flare. With normal care and proper treatment, it will provide years of reliable service. Please read all operating instructions carefully before use.

WARNING & SAFETY INFORMATION!

- Always consult your local highway safety guidelines for appropriate use and placement when using in emergency roadside situations.
- This product is not a toy. Do not allow children to play with this item.
- Do not store in direct sunlight or near a heat source.
- Use for intended purposes only.
- This product contains strong magnets that may cause interference with pacemakers and other implanted medical devices when placed within a close proximity. Keep this product at least 6 inches from your chest if you have a pacemaker.

FEATURES

- Water- and dustproof (IP67)
- Floats
- Submersible up to 1 m for 30 minutes
- Bright flashlight plus 5 emergency patterns
- Strong magnets
- Double metal hooks
- Non-flame producing flare
- 360° visibility up to 1 mile

SPECIFICATIONS

Brightness (Lumens)	Flashlight: 150 lm Flare: 50 lm
LED quantity	12 (6 white/6 red)
Light patterns	6 (5x emergency, 1x flashlight)
Visibility	360° up to 1 mile
Battery requirements	3x AA
Material	Polycarbonate (PC) Thermo-Plastic Rubber (TPR)
Load capacity	0.5 ton
Unit size	4.8 in × 4.8 in × 1.5 in
Unit weight	0.7 lbs

OPERATION

- To turn unit on: Press the power button.
- To change mode: Press the power button gently until desired flash pattern is found.
- To turn off: Press the power button.

LIGHT PATTERNS (RUN TIME)

✱ FLASHLIGHT (10 HOURS)	✱ ROTATE (13 HOURS)
✱ TRIPLE-BLINK (32 HOURS)	✱ ALTERNATE (5 HOURS)
✱ SINGLE-BLINK (100 HOURS)	✱ SOLID-ON (5 HOURS)

INSERTING / CHANGING BATTERIES

1. Insert coin into slot on back of unit and turn counter clockwise to loosen and remove the battery cover.
2. Install 3 AA batteries:
 - Replace the batteries in the proper orientation shown on the battery holder.
 - For best performance, always replace all batteries at the same time. Do not mix old and new batteries or batteries of different types (alkaline, heavy duty, and rechargeable).
3. Replace the battery cover and turn clockwise to tighten using a coin to ensure a tight seal.

MAINTENANCE

- All batteries discharge over time. Replace batteries every 6 months.
- Use a slightly damp cloth with mild detergent to clean the outer surface as needed.
- Batteries should be removed from your unit if it will not be used for an extended period of time.



Customer enquiries:

We're at your service. Let us help you find a better way forward.

Tel: +49 (0) 7131 27588-44
Michelin@helix-automotive.com

Manufactured and distributed under licence by
 Helix Automotive GmbH, Fischeracker 4, DE-74223 Flein

© 2021 Michelin, www.michelin-lifestyle.com

MICHELIN and/or the Michelin Man Device and/or BIBENDUM are trademark(s) owned by, and used with the permission of, the Michelin Group.

